

## Connecting and Setup

1. Ensure the printer is OFF.
2. Connect the data cable to the printer with the release button facing downwards. (NOTE: The connector is located on the bottom left hand side, and may have a rubber cap. Hold the cap back and gently snap the cable in place. DO NOT force the connector.)
3. Plug the other end of the data cable in the round connector on the reader.
4. Turn ON the printer. The printer is now ready for use.



## Printing from a Reader (AutoPrint)

1. The reader may be disconnected from the printer cable for easier scanning. It will accumulate all scanned leads.
2. When a printout is required, simply re-connect the reader to the printer cable and ensure the printer is on. Printing will occur automatically. Do not disconnect the reader until printing is complete.
3. The printer will print all leads since the last print.

## Turning ON

Hold down the button labelled 'ON/OFF' briefly then release it. The CMP10 should now be ON as indicated by the green light.

## Turning OFF

Hold down the button labelled 'ON/OFF' for about 3 seconds then release it. The CMP10 should now be OFF. You should turn off the unit at the end of each day.

## Auto OFF

The CMP10 will automatically turn itself off if unused for more than 1 hour. Should this occur, simply turn the unit ON again.

## Charging the Battery

1. Plug the AC adapter into a 110V wall socket.
2. Plug the other end into the power input connector on the back of the printer.
3. While charging, the charging indicator will be red. The printer may still be used while charging.
4. When the printer is fully charged, the charging indicator will turn green.

**NOTE:** The printer must be charged at room temperature

## Changing Paper

1. Press the blue button on the top right hand side of the printer to open the paper lid.
2. Discard the old paper roll.
3. Insert a new roll with the paper protruding past the front. The paper should roll out from the bottom.
4. Press the paper lid closed, press the LF button once and tear off the excess paper.

**NOTE:** Do not remove the black roller